

# KEYGUARD DIGITAL XL

## Instructions



### OPENING YOUR KEYGUARD XL FOR THE FIRST TIME.

- Remove unit from the box and place it on its back
- Pull the rubber cover open
- Make sure that the dial is in the vertical position
- Press and slide the 'clear' button (the ridged black button pictured below) down. Release the clear button.



- Turn the dial clockwise 360 degrees, until it clicks
- Pull the door open

### SETTING YOUR CODE.

- With the door open, turn the dial anti-clockwise, until it clicks. Make sure the locking bar is in the locked position
- Stand the Keyguard XL upright, keeping the door open
- Using a screwdriver, remove the central screw securing the black plastic plate



- Choose a personal code which must be between 3 and 8 digits. NOTE: You may only use each number/letter once
- Using a flathead screwdriver, rotate each button in your code 180 degrees, so that the arrow on each one faces the SET position



- Re-secure the black plastic plate with the small screw, make sure you leave the door open to check your code

### CHECKING YOUR CODE.

- With the door still open, make sure the Keyguard XL is locked by rotating the dial anti-clockwise 360 degrees, until it clicks
- Make sure the dial is in the vertical position
- Press and slide the clear button down and then release the button
- Use the keypad to input your chosen code
- Turn the dial clockwise until it clicks
- If it opens, Keyguard XL is ready to use



### CHANGING YOUR CODE.

- Open your Keyguard XL as normal
- Remove the screw securing the black plastic plate with a small flat-headed screwdriver
- You will need to turn the disk of each number in your previous code until the arrow faces the NOT SET position
- You can now repeat all of the steps in the section marked 'SETTING YOUR CODE' and 'CHECKING YOUR CODE'

### OPENING YOUR KEYGUARD NORMALLY.

- Ensure that the dial is in the vertical position (shown in the image below)
- Enter your code
- If you enter your code wrong, press and slide the clear button down and then release the button. You can now re-type your code
- Rotate the dial clockwise 360 degrees, until it clicks
- Pull the door open



### LOCKING YOUR KEYGUARD NORMALLY.

- Close the door and lock it by turning the dial anti-clockwise 360 degrees. It should click at least once
- Ensure that it has locked properly by turning the dial clockwise 360 degrees until it clicks. Try and open the door, if it does not open your Keyguard XL is now fully secure
- Close the lid of the rubber cover

### TROUBLE SHOOTING.

- The dial must be in the vertical position to use the code buttons
- If your code hasn't worked, ensure you press the 'CLEAR' button before entering the code again
- Ensure that the arrow on the dial of each button is in the SET position when setting your code
- Ensure that all numbers not in your code have their dials facing the NOT SET position
- Ensure that the black plastic plate is properly and securely refastened
- You may find that when you turn the dial you feel some resistance, do not worry, this is normal.



## FITTING YOUR KEYGUARD.

To fit your Keyguard XL you will need the following tools:

- Power Drill
- 5mm Masonry Drill Bit
- Small Socket Driver
- 8mm Socket Head
- Marker Pen

NOTE: Your Keyguard XL should be fitted to a solid surface. We recommend brickwork, stone, concrete or steelwork

- To start use the rubber cover as your template to mark the fixing holes on the wall. Ensure you choose a location that allows the best possible fixing e.g. the centre of a brick. N.B. You must never fix into the mortar.



- Now use the 5mm drill bit to make a hole 55mm deep in each of the marked fixing holes
- Place the Keyguard XL inside the rubber case
- Open the door of your Keyguard XL and place the whole unit onto the wall lining up the holes.



- Push the fixing bolts that have been supplied with your Keyguard XL into each of the holes
- Tighten each bolt fully using a socket set



## TROUBLESHOOTING.

- Once the fitting is complete if the door closes but does not lock, test locking it when the door is in the open position. If it works, it is likely that the fixing bolts are protruding too far into the Keyguard XL. Try to secure them further into the wall and close the door again
- If the buttons will not press, ensure that the dial is in the vertical position
- If your code does not work, press the 'CLEAR' button and start again



Burton Safes offer a range of fixing bolts to suit different applications that retain the security specification;

- Fixing kit - anchor bolt



- Fixing kit - concrete screw with pan head



- Fixing kit - concrete screw 75 mm (for rendered walls)



- Fixing kit - concrete screw 100 mm (for rendered walls)



If you require the fitting instructions for any of the above please visit the website

[www.burtonsafes.co.uk/product/keyguard-digital-xl/](http://www.burtonsafes.co.uk/product/keyguard-digital-xl/)

or call our office during office hours on **01484 663388** for further assistance.



## KEYGUARD DIGITAL XL

### INSTRUCTION BOOKLET

- Standard fixing bolts •



In the event of a product malfunction please contact Burton Safes Ltd

Burton Safes Ltd.  
Brockholes  
Holmfirth  
HD9 7BN  
Tel: 01484 663388

**BURTONSAFES**  
THE SURE DEFENCE.